Basic Setup



Manual for the initial setup of the Galaxy Tab 4

This manual helps you to set up a number of security features on your tablet. These consist of:

- Setting up a password that needs to be entered each time the device is powered on
- Enabling the lock screen
- Enabling device encryption

-- When using UM IT services you agree to UM's Acceptable Use Policy. The complete text can be found on the website: http://www.maastrichtun iversity.nl/informationsecurity --

What do you need?

• Your Galaxy tab 4 and having it connected to a power source

Please consult the "Frequently Asked Questions" at the end of the manual in case you encounter problems in using the manual or the service.

Screenshot	Information
O9:45 : • • Wed. 17 December : • • • • • • • • • • • • • • • • • • • • •	Step 1: Go to application overview
Apps Widgets Downloaded apps Image: Contracts Image: Contracts	Step 2: Go to Settings

Instructions

Connections Device SOUND AND DISPLAY Sound Display Multi window PERSONALISATION	Controls General Q Lock screen SCREEN SECURITY Screen lock None	Step 3a: Go to Device and then to Lock Screen Step 3b: Click Screen lock
Lock screen Wallpaper Wallpaper Font Notification panel Accessibility Blocking mode		
Connections Device SOUND AND DISPLAY Image: Sound Image: Sound Sound Image: Sound Sound Image: Sound Soun	Controls General Q Lock screen 1 Select screen lock Swige Wasewiny Passewing Patern Modern security Pil Modern Schlight security Passewing Control Schlight security Modern Schlight security Control Schlight security None Control Schlight security	Step 4: Select Password. The password needs to consist of at least 6 characters containing at least 1 number.
Connections Device SOUND AND DISPLAY Image: Sound	Controls General Cock screen Screen Schwarts Screen Schwarts Screen Schwarts Screen Schwarts Screen Schwarts Schwarts Schwarts Schwarts </td <td>Step 5: Change the Lock automatically setting to your liking We recommend the default setting of 5 seconds.</td>	Step 5: Change the Lock automatically setting to your liking We recommend the default setting of 5 seconds.
Connections Device USCKUP and reset DEVICE MANAGER Date and time Accessories Application manager Default applications Users De built	Controls General Q Security ENCRYPTION Encrypt device Password required to decrypt device each time you turn it on Encrypt external SD card FIND M MOBILE Remote controls Of G to website http://findrymobile.amsung.com	 Step 6a: Go to the General tab and then to Security. Step 6b: Click Encrypt device Note: You need a battery charge of at least 80% and the tablet needs to be connected to a power source. Note: The encryption process may take up to an hour or more.
 Battery Power saving mo. Storage Storage Security About device 	PASSWORDS Make passwords visible Show password characters briefly as you type them. DEVICE ADMINISTRATION Device administrators View or disable device administrators. Unknown sources	Note: If you interrupt the encryption process, data may be lost.

Frequently Asked Questions

Question	Answer

I am unable to start the device encryption	Make sure your tablet has 80% battery, is plugged in, and that you have set up a password that consists of at least 6 characters containing at least 1 number.
The "Lock automatically" option is not available	This option is only available after you have set-up a password for this device.